


HardWare仕様

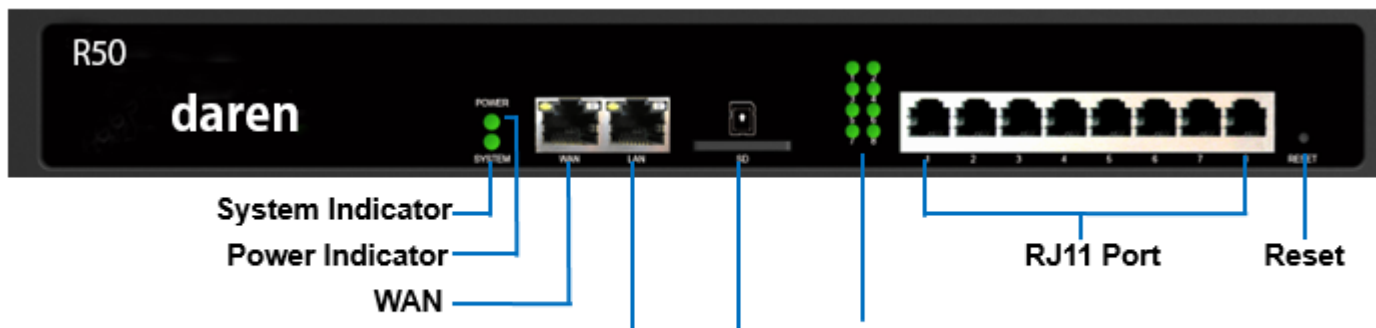

LED	Indication	Status	Description
POWER	Power status	On	The power is switched on.
		Off	The power is switched off.
SYSTEM	System status	Blinking	The system is running properly.
		Static/Off	The system goes wrong.
1-8 LED (RJ11 port status)	FXS	Green: static	The analog phone is idle.
		Green: blinking	The analog phone is busy.
	GSM/3G/4G	Red: static	The GSM/3G/4G Trunk is idle.
		Red: blinking slowly	No SIM card.
		Red: blinking rapidly	The GSM/3G/4G trunk is in use.
	BRI	Orange: blinking	The BRI line is disconnected.
		Orange: static	The BRI line is connected or in use.
	FXO	Red: static	The PSTN line is idle.
		Red: blinking slowly	No PSTN line is connected to the FXO port.
		Red: blinking rapidly	The PSTN line is busy.
Port	Description		
WAN/LAN	<p>Yeastar S50 provides two 10/100/1000Mbps adaptive RJ45 Ethernet ports, and supports 3 Ethernet modes. The default mode is "Single".</p> <ul style="list-style-type: none"> • Single: LAN port will be used for uplink connection. WAN port is disabled. • Bridge: LAN port will be used for uplink connection. WAN port will be used as bridge for PC connection. • Dual: Both LAN and WAN ports can be used for uplink connection. 		



Port	Description
Antenna Socket	Rotate the antenna into the Antenna Socket.
Power Switch	Press this button to switch on/off the device.
Power Inlet	Connect the supplied power supply to the port.
Protective Earth	Connect to the ground to reduce the risk of electrocution to the user or protect the PBX from the bad effects of external noise in the case of a lightning strike.